



ADDAC218 ATTENUVERTERS
ASSEMBLY GUIDE

Revision.01 June.2021


ADDAC System

ADDAC218 Assembly Guide



June.2021




STEP 1:
Trim any excess pcb with a cutter.

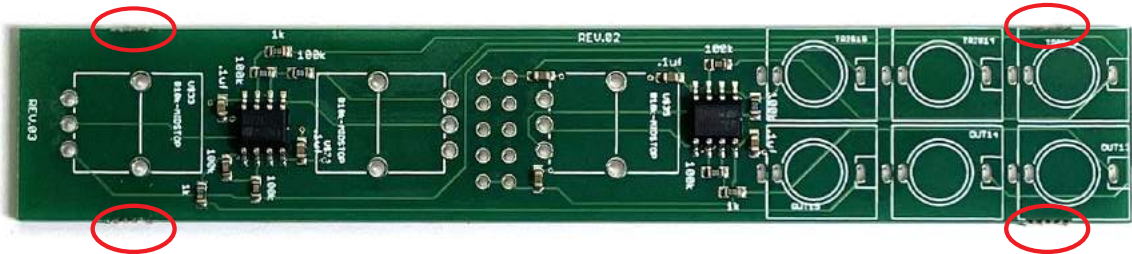

STEP 2:
Place and solder de 2x5 pinheader

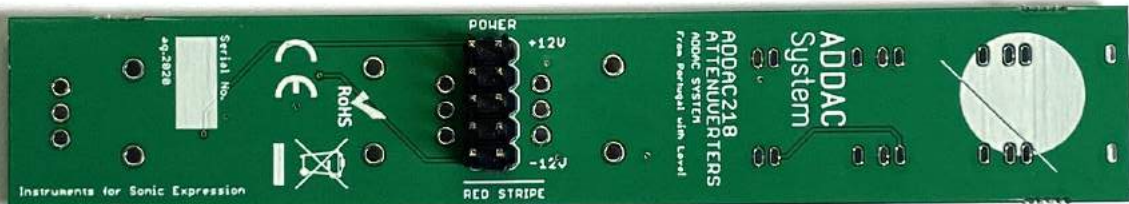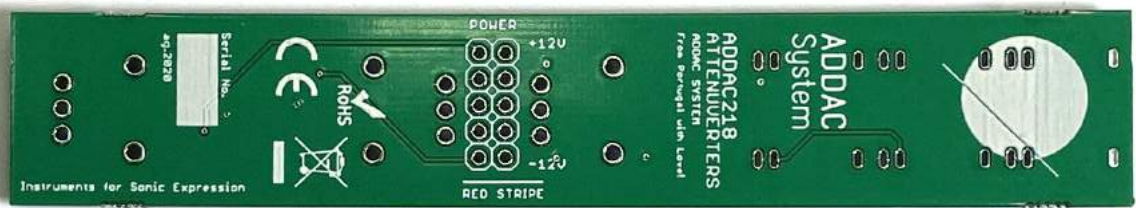


STEP 3:
Place all the jacks and pots

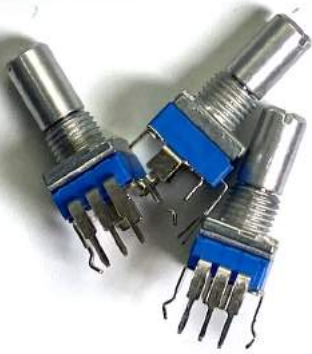

STEP 4:
Place the frontpanel and tighten all nuts



STEP 5:
Solder all parts

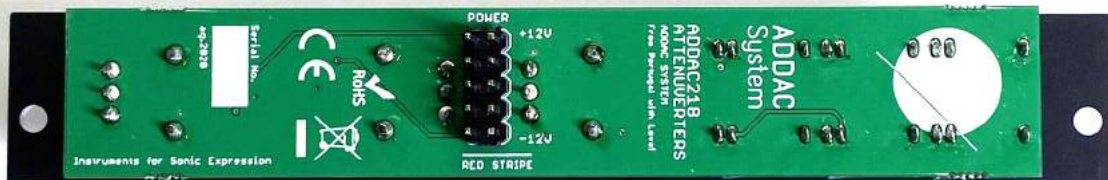

Finish it by placing the knobs and you've finished the assembly process!

Happy patching!



For feedback, comments or problems please contact us at:
addac@addacsystem.com