




ADDAC200CT CABLE TESTER
 ASSEMBLY GUIDE

Revision.01 May.2024

ADDAC System


ADDAC200CT Assembly Guide

May.2024

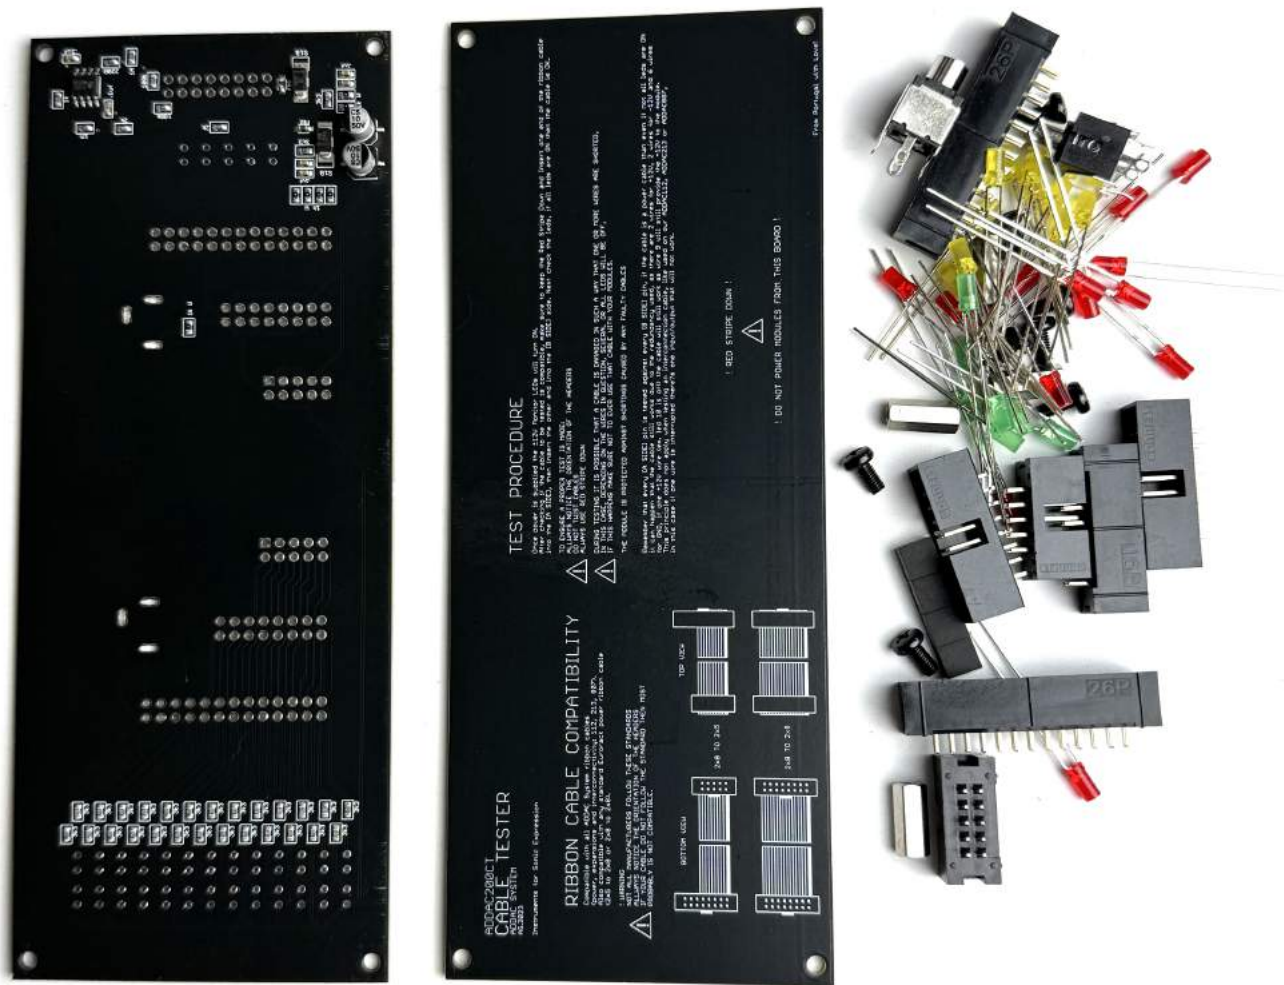

ADDAC200CT Assembly Guide


STEP 1:
First let's place and solder all sockets.
Notice the orientation of the indents.

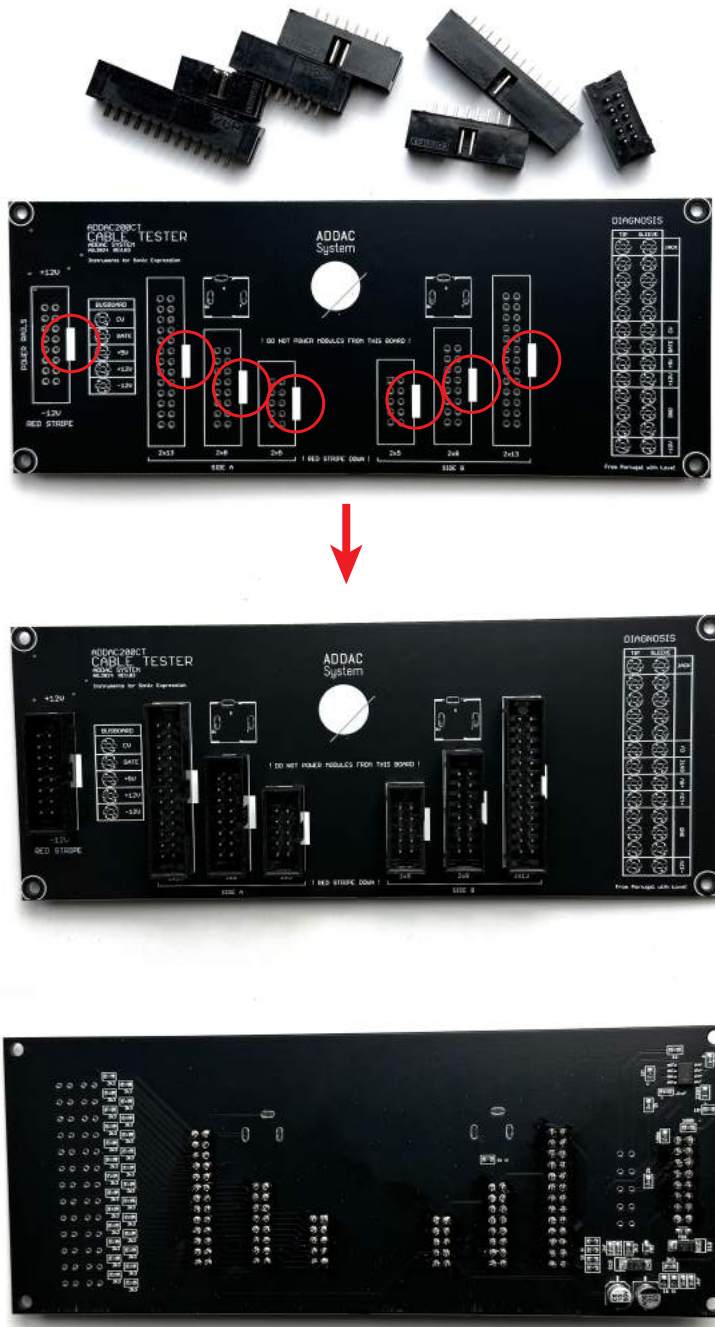

ADDAC200CT Assembly Guide

STEP 2:

Locate the 3.5mm jacks and cut the thinnest leg like shown below.

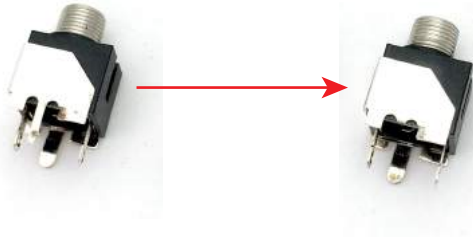

STEP 3:

Proceed by placing and solder the jacks to the pcb.



ADDAC200CT Assembly Guide

STEP 4:

Next place and solder all leds, follow our color pattern below.
Pay close attention to the led polarities, notice the + on the pcb.





STEP 5:
Place all spacers at the four corners and attach both pcbs together



ADDAC200CT Assembly Guide

STEP 6:
Finish by placing the four rubber feet.

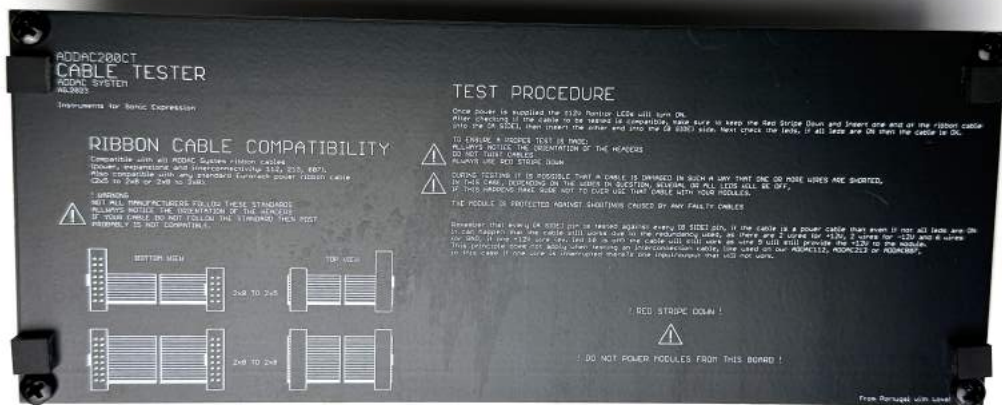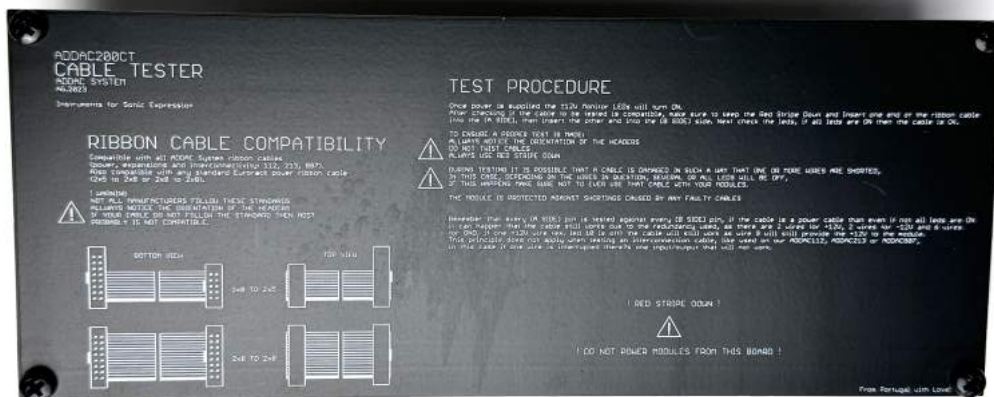

Congratulations you're done!
Happy Patching!!



For feedback, comments or problems please contact us at:
addac@addacsystem.com